




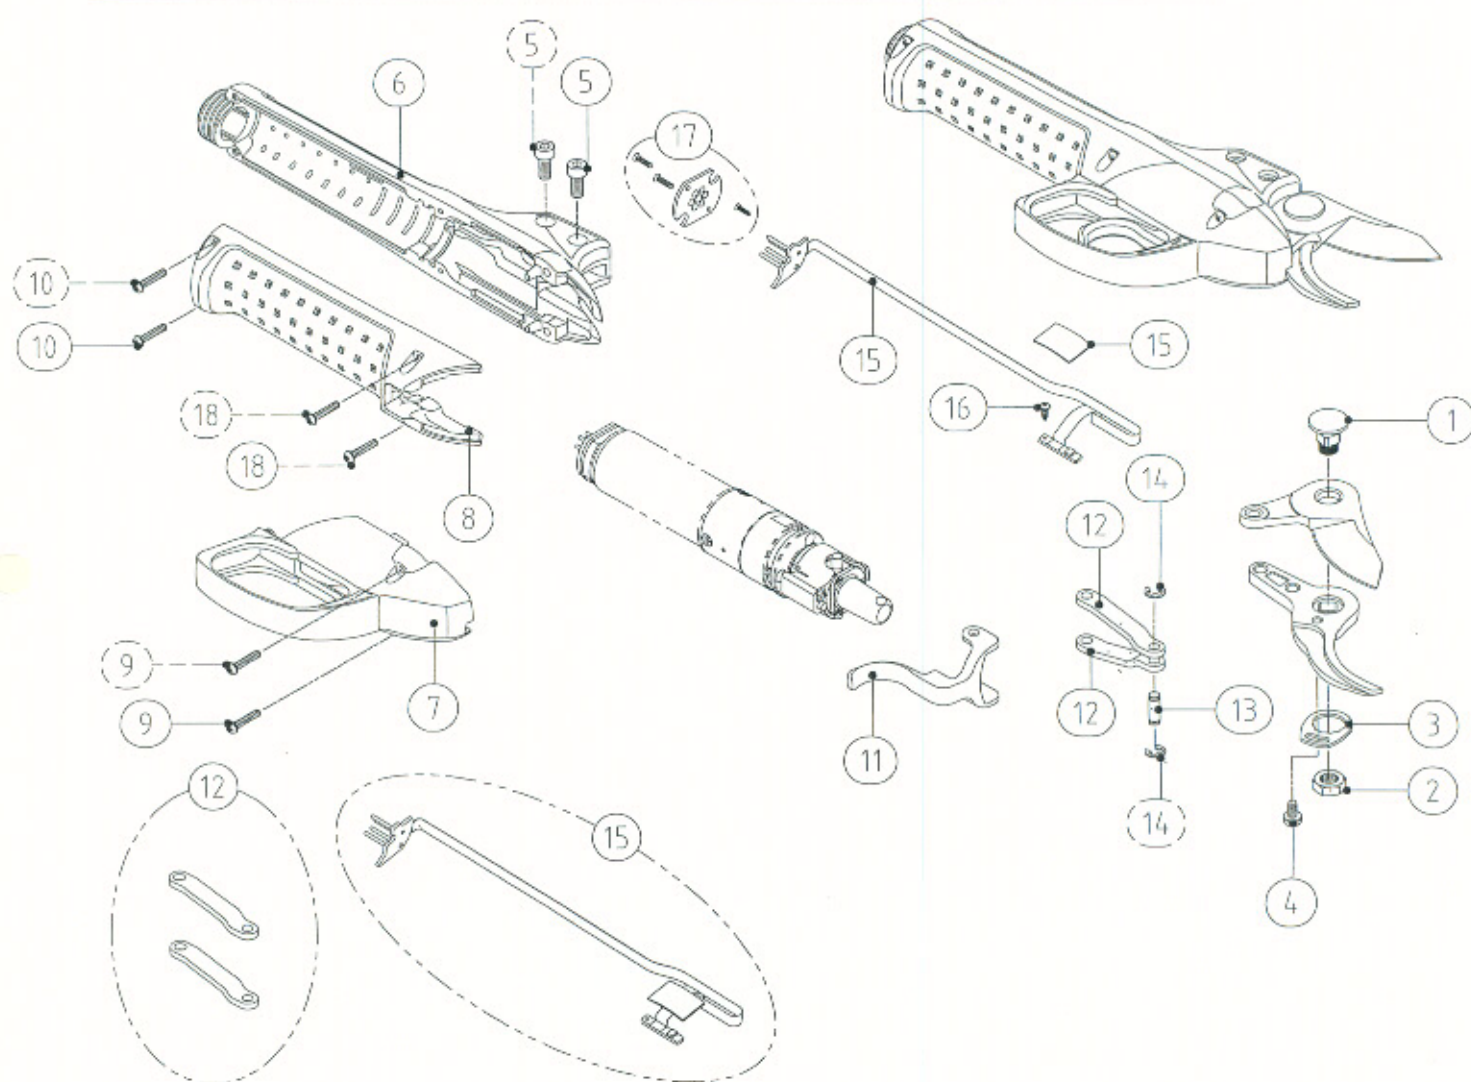


- ① SP-EP-001 Centre Bolt for the Blades
- ② SP-EP-002 Nut for the Blades
- ③ SP-EP-003 Nut Retainer
- ④ SP-EP-004 Screw for Nut Retainer
- ⑤ SP-EP-005 Counter Blade Holding Screw (1pc)
- ⑥ SP-EP-006 Upper part of Pruner Body
- ⑦ SP-EP-007 Front-Lower Part of Pruner Body
- ⑧ SP-EP-008 Lower Part of Pruner Body
- ⑨ SP-EP-009 Screw for the Front-Lower Part of Pruner Body (1pc)
- ⑩ SP-EP-010 Tapping Screw for the Lower Part of Pruner Body (1pc)
- ⑪ SP-EP-011 Trigger
- ⑫ SP-EP-012 Link (2pcs)
- ⑬ SP-EP-013 Linking Pin
- ⑭ SP-EP-014 E Ring (1pc)
- ⑮ SP-EP-015 Flat Cable with Copper Tape
- ⑯ SP-EP-016 Screw for the Flat Cable
- ⑰ SP-EP-017 Veneer with 3 Screws
- ⑱ SP-EP-045 Screw for the Lower Part of Pruner Body (1pc)

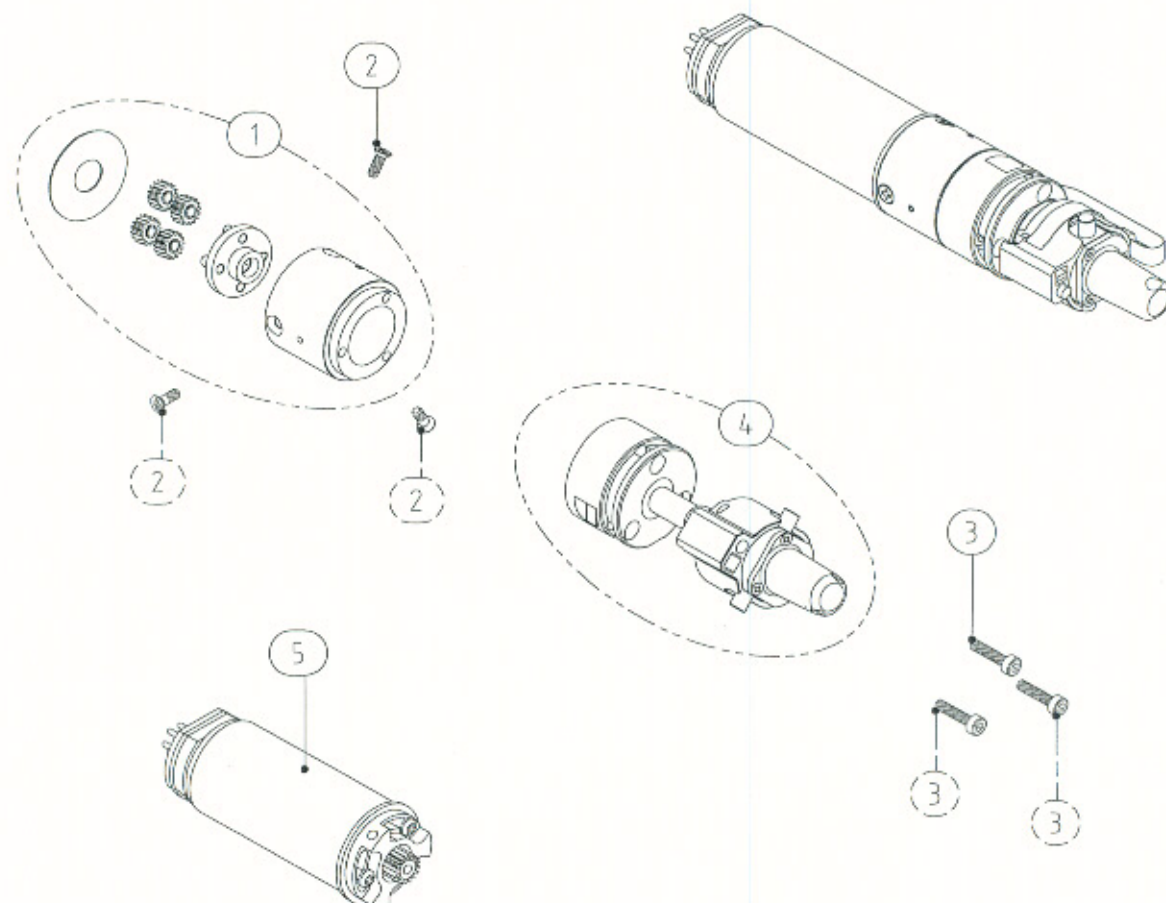

- ① SP-EP-018 Planet Gear Assembly
- ② SP-EP-019 Screw for the Planet Gear Case (1pc)
- ③ SP-EP-023 Bolt for Ball Screw Nut Assembly (1pc)
- ④ SP-EP-025 Ball Screw Nut Assembly Set
- ⑤ SP-EP-026 Motor

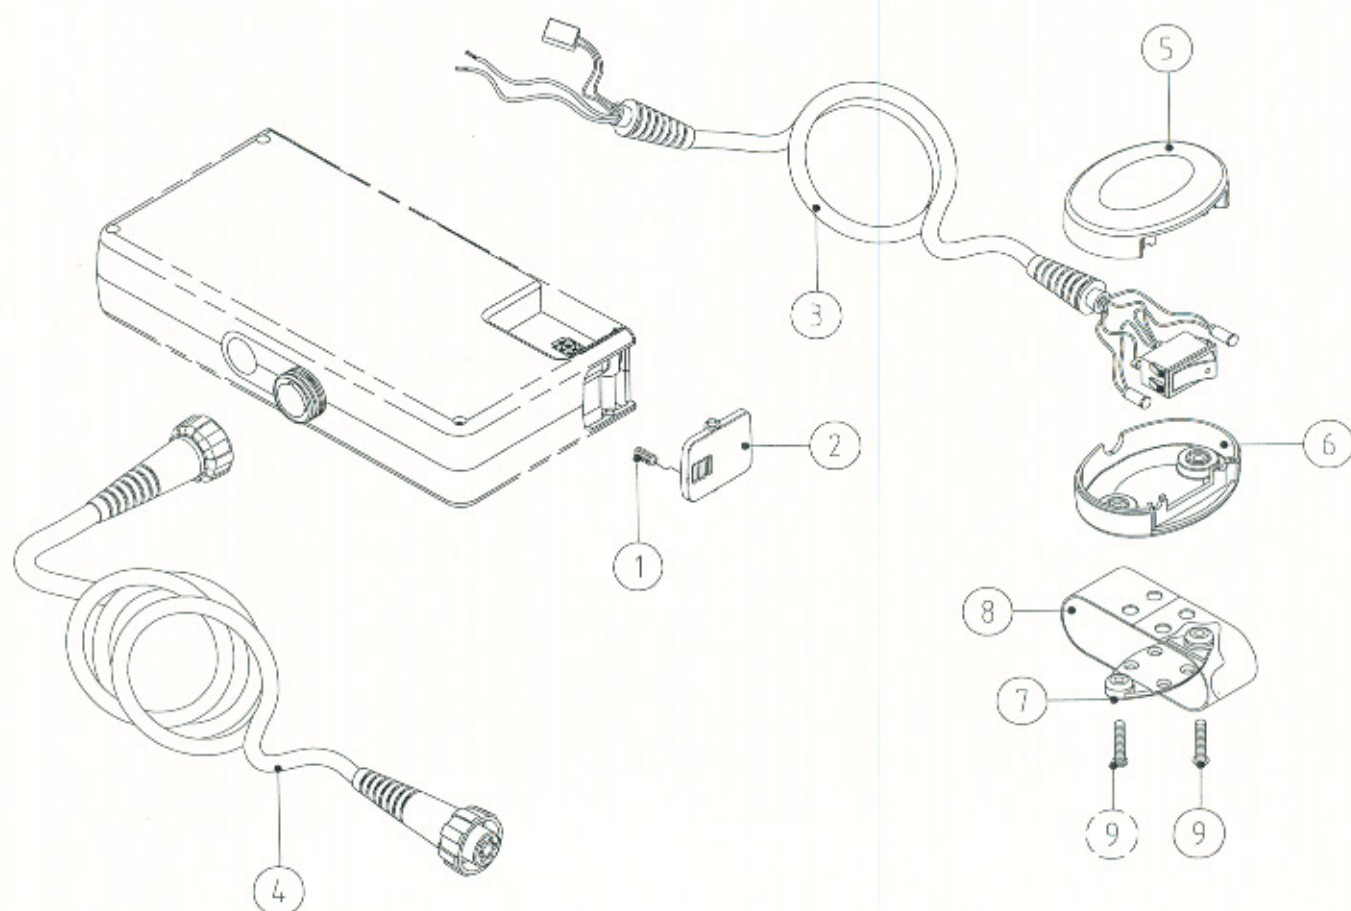


- ① SP-EP-027 Spring for Battery Box Stopper
- ② SP-EP-028 Battery Box Stopper
- ③ SP-EP-029 Switch Cable
- ④ SP-EP-030 Main Cable
- ⑤ SP-EP-031 Switch Case A
- ⑥ SP-EP-032 Switch Case B
- ⑦ SP-EP-033 Belt Loop Fixing Plate
- ⑧ SP-EP-034 Belt Loop
- ⑨ SP-EP-035 Screw for Belt Loop Fixing Plate (1pc)

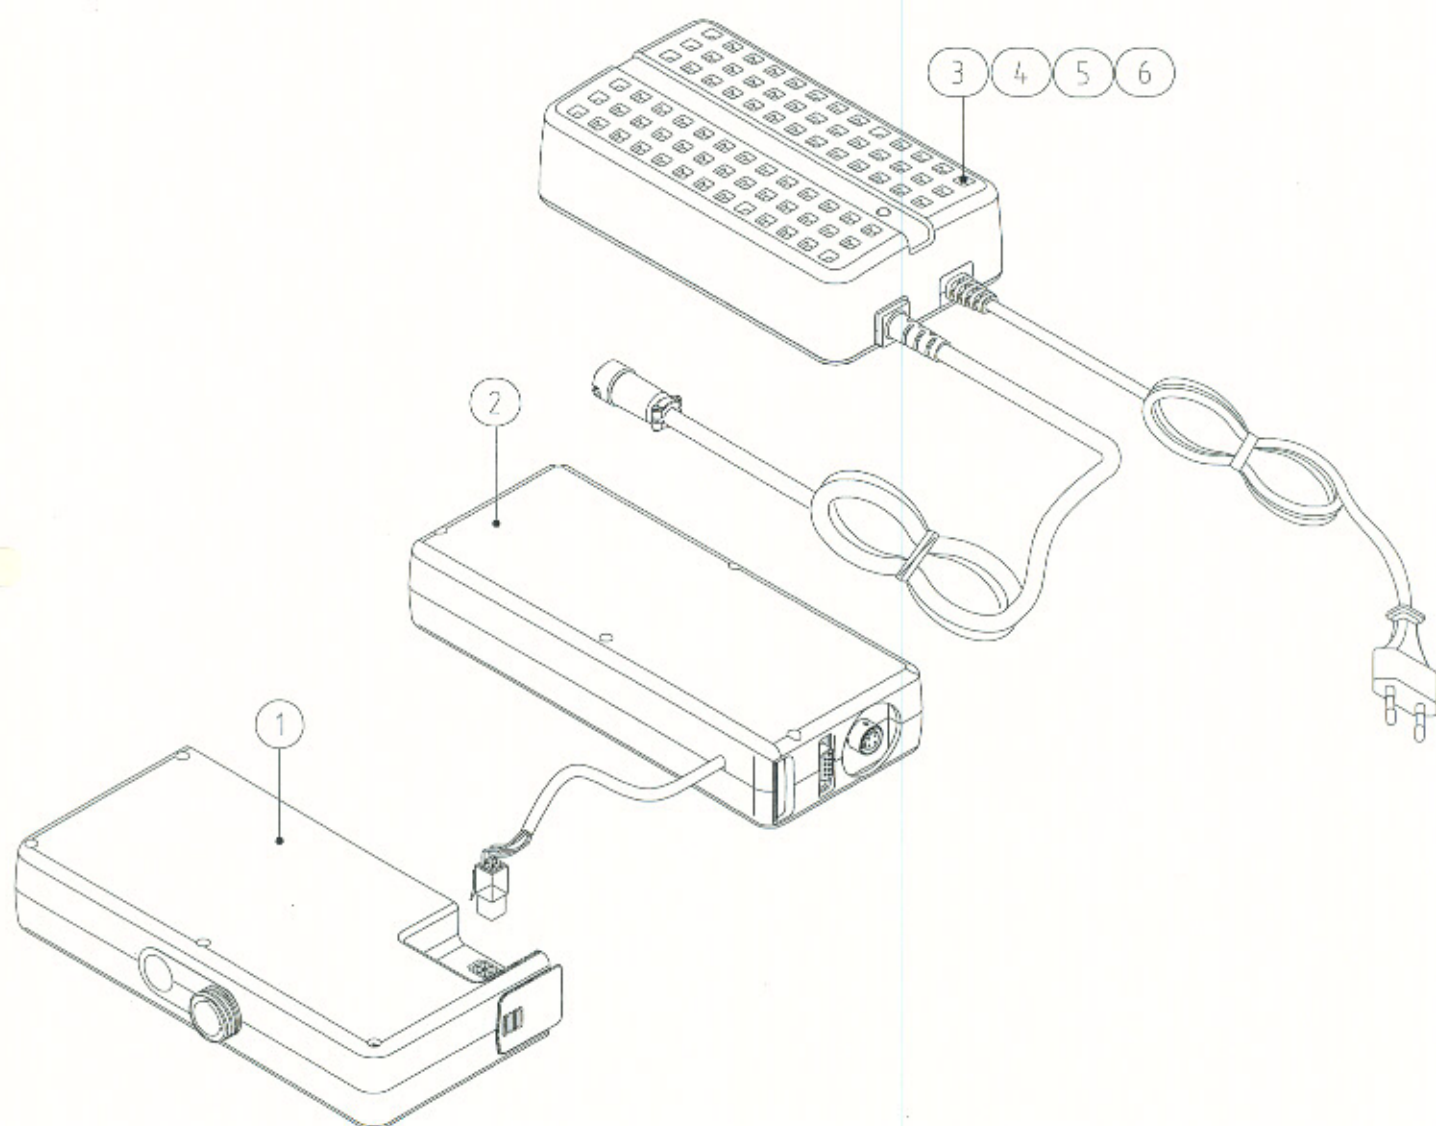


- ① SP-EP-036 Control Box
- ② BL-37 EX Battery Pack
- ③ SP-EP-037 Charger for EP-700 EX-Z (TYPE A PLUG)
- ④ SP-EP-038 Charger for EP-700 EX-Y (TYPE C PLUG)
- ⑤ SP-EP-039 Charger for EP-700 EX-X (TYPE O PLUG)
- ⑥ SP-EP-040 Charger for EP-700 EX-C (TYPE CHINA PLUG)



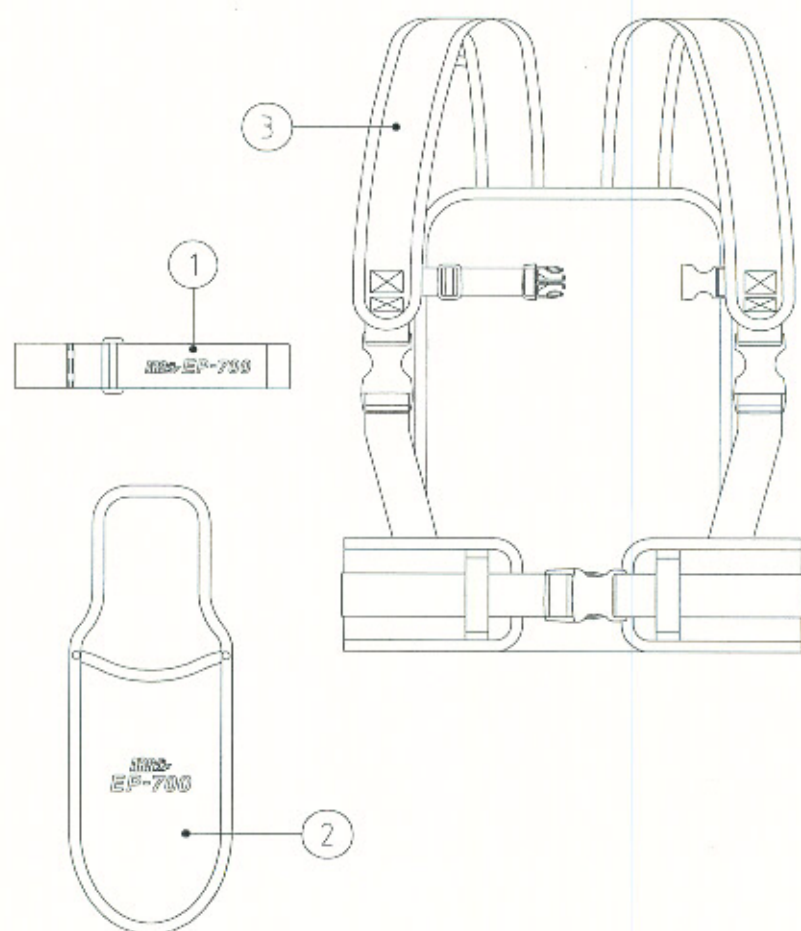

- ① SP-EP-041 Arm Band
- ② SP-EP-042 Holster
- ③ SP-EP-043 Harness

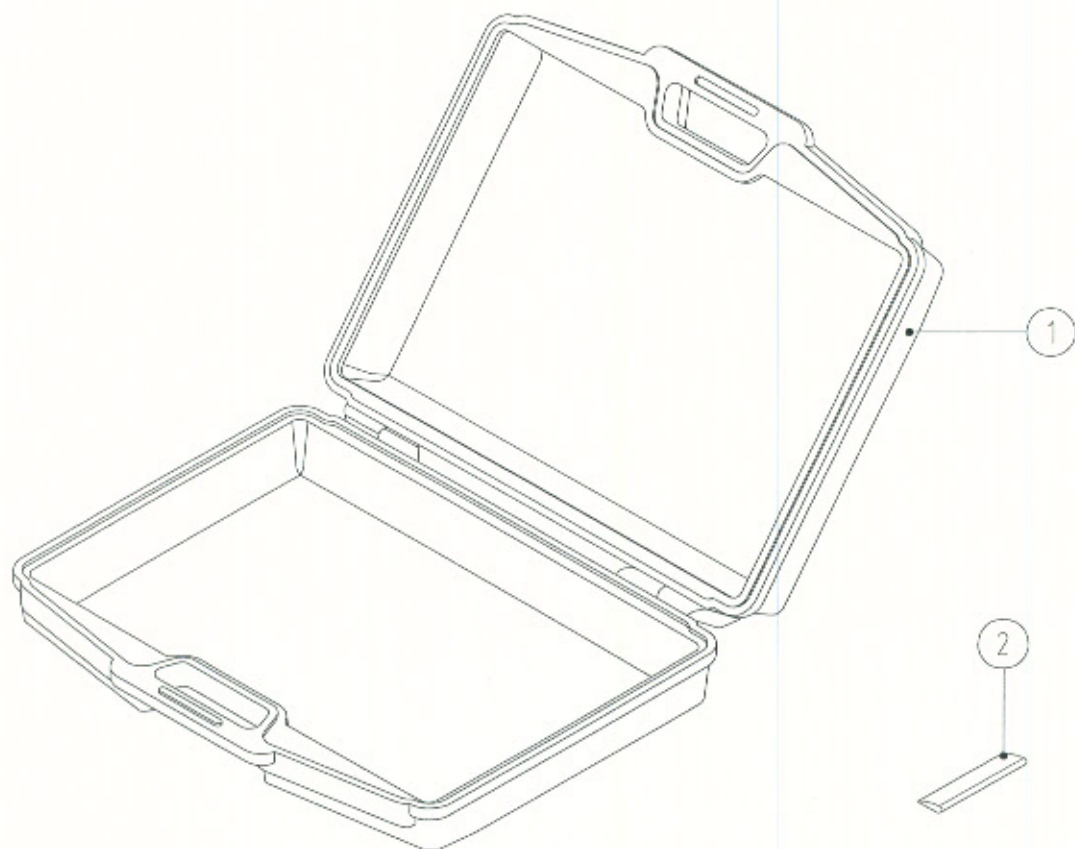

- ① SP-EP-044 Carrying Case
- ② SS-240 EX Sharpening Stone